




Remotely Control Access to Your Rental Properties

Download the Audit Trail from eRL-BE365

Step 1 – Open the back cover

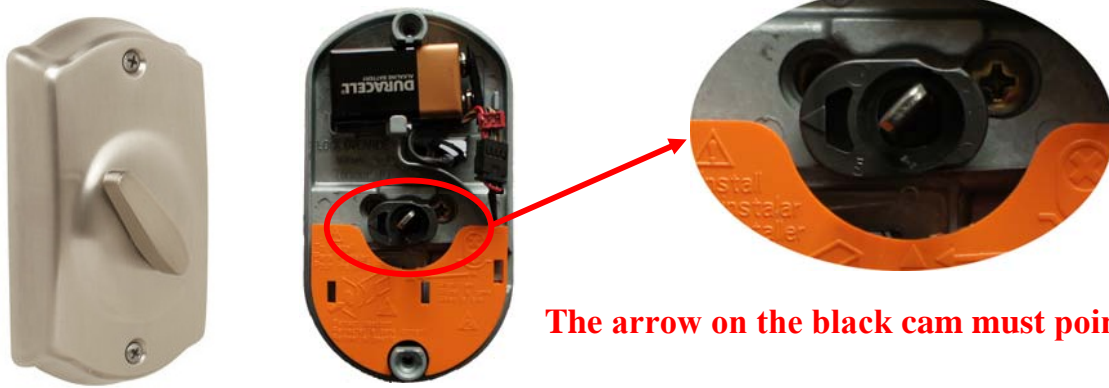


The arrow on the black cam must point to left or right!

Step 2 – Connect ATR-11

Step 3 – Enter download command

Step 4 – Downloading...

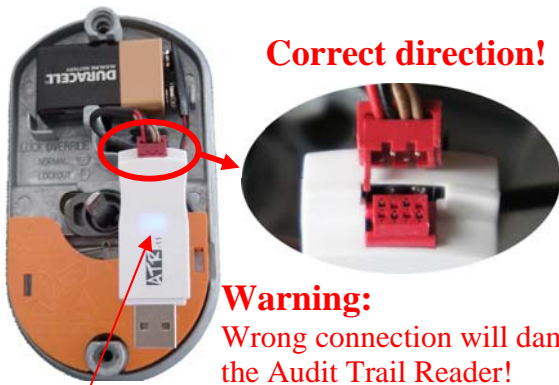

Correct direction!

Warning:

Wrong connection will damage the Audit Trail Reader!



Enter keypad command as:
6-digit Master Code
[SCHLAGE] 9 [SCHLAGE]



Blue LED fast flashing for about 10 seconds. After blue LED slow flashing, the download completed.

Blue LED slow flashing

www.eRentalLock.com

Vancouver, BC, Canada
info@eRentalLock.com



Remotely Control Access to Your Rental Properties

Download the Audit Trail from eRL-FE595

Step 1 – Open the back cover



The black cam must be in this position!

Step 2 – Connect ATR-11

Step 3 – Enter download command

Step 4 – Downloading...



Correct direction!

Warning:
Wrong connection will damage the Audit Trail Reader!

Blue LED slow flashing



Enter keypad command as:
**6-digit Master Code [SCHLAGE]
9 [SCHLAGE]**



Blue LED fast flashing for about 10 seconds. After blue LED slow flashing, the download completed.

www.eRentalLock.com

Vancouver, BC, Canada
info@eRentalLock.com




Remotely Control Access to Your Rental Properties

View or Print the Audit Trail on PC version or Web version program


Step 1 – Plug the ATR-11 into PC USB port



Step 2 – Run the PC or Web program

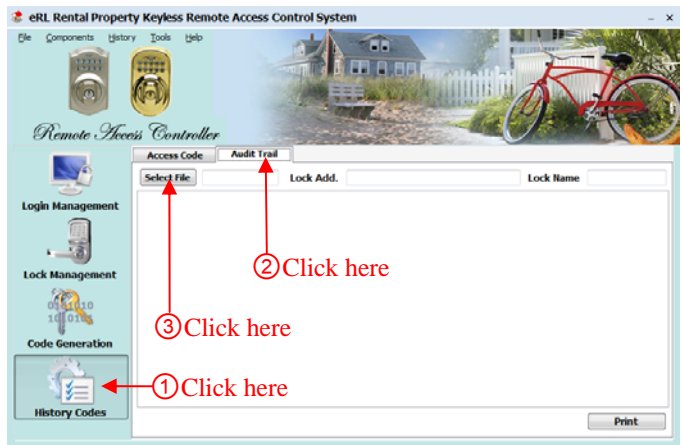

Step 3 – Open the Audit Trail file in ATR-11

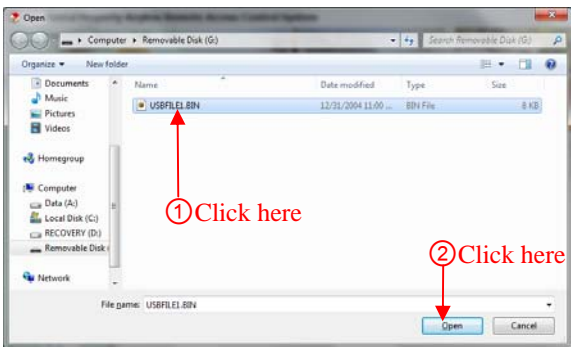

Step 4 – View or Print the Audit Trail



www.eRentalLock.com

Vancouver, BC, Canada
info@eRentalLock.com